



Androv Sunrise Alarm Clock Radio

 


Instruction Manual
Bedienungsanleitung
Manuel D'utilisation
Sveglia con simulazione dell'alba

Introduction

Congratulations on the purchase of your Androv Sunrise Alarm Clock Radio. We have designed and made this product to meet European safety standards, and to offer many years of reliable use, but as with any electrical equipment you should take care and read the instructions, to get the best possible safety and satisfaction from the product. Please keep your receipt, these instructions, and the original packaging safe in case of future requirement.

Safety Guidelines



This equipment is double insulated and an earth connection is not required.



Dangerous voltage constituting a risk of electric shock is present inside this equipment.



This mark is applied to show the equipment conforms to European safety and electro-magnetic compatibility standards.



There are important operating and maintenance instructions in the literature accompanying this equipment.

Read these instructions carefully before you try to use the equipment.

Protect the mains lead. You must ensure the mains lead cannot be walked on, crushed, chafed or cut.

Avoid harsh conditions such as wet or damp places, high humidity, strong vibration, extremely high or low temperatures, strong sunlight and places that are very dusty. The unit has been designed for indoor use only.

Never let anyone push objects into holes and ventilation slots. Children should be supervised if playing close to the lamp.

To save power: Unplug the power cable when you are not using the equipment. The equipment is designed to operate from a 230 Volt, 50Hz AC mains supply.

Do not use this equipment if you have spilt liquids in it, if it is damaged in any way, it emits unusual smells, or if it does not work as expected. Immediately unplug the equipment and get expert advice. If the mains lead becomes damaged, the manufacturer, its service agent or similarly qualified person must replace it with a lead of the same type and rating to avoid a hazard.

This product is designed for domestic use only. Any other use may invalidate the guarantee and might be dangerous.

Safety Guidelines

Ventilation

Place the equipment on a hard flat surface away from direct sunlight and heat sources and ensure there is at least a 15cm free space around it and 40cm above for sufficient ventilation. Do not obstruct the ventilation slots, including those underneath, with soft furnishings. Overheating will shorten the life of the equipment and increase the risk of fire.

Cleaning

Disconnect the mains supply and use only a lightly dampened soft cloth. Do not use chemical solvents or strong detergents as these may damage the cosmetic finish. Ensure the unit is completely dry before usage.

Important Safety Warnings

 
- To prevent electric shock, do not remove any cover during usage. If anything goes wrong, do not try and fix it yourself, but get a qualified service agent to look at it.
- Do not expose this equipment to water, or place any objects filled with liquids, such as vases, on the equipment.
- Never put a naked flame source on or near the equipment.
- Small parts - Do not let young children play with the equipment.
- Check that the voltage marked on the rating plate of the equipment matches your mains supply.
- Do not use the equipment for any purpose other than its intended use.
- Do not let the power cord hang over the edge of a table or counter top.
- Do not let the power cord touch any hot surface.
- Do not operate the equipment with a damaged mains lead or after the equipment has been dropped or damaged in any way.
- Do not immerse the equipment or its lead in water or any other liquid.

WARNING - To reduce the risk of personal injury or product/property damage:


- Hot parts inside! Make sure the ventilation slots on the light hood are not covered.
- Light bulb rating must not exceed 60W for incandescent filament light bulbs. Approved dimmable CFL (energy saving) bulbs may also be used.
- Never use the unit when the lamp housing is damaged, broken or missing.
- Do not use the unit at room temperatures lower than 10 or higher than 35 degrees centigrade.

Location of Controls

Front view

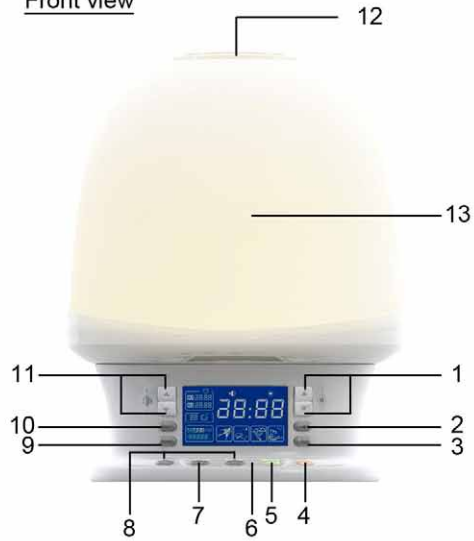

Rear view

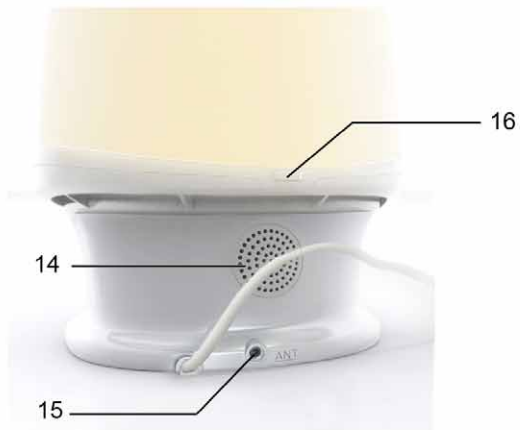 

Location of Controls

1. Light Brightness Buttons
2. Light On / Off Button
3. Zzz Button
4. OFF Button
5. Alarm Button
6. LCD Display
7. Set Button
8. Up/Down Buttons
9. Dimmer Button (off / normal / bright)
10. Sound / Radio On / Off
11. Volume Buttons
12. Snooze Button
13. Lampshade
14. Speaker
15. Antenna
16. Release Button

LCD Display



Operating Instructions

Make sure the mains plug is properly connected to a 230V 50Hz household AC power outlet.

SETTING THE CLOCK

Automatic Setting (for most European countries with RDS broadcasting)

- When the unit is connected to the AC outlet, the display will flash "0:00". The RDS icon and "TIME SETTING" will appear on the display to start automatically setting the time.
- After a few minutes, the correct current time and "SET SUCCESS" will run through the bottom of the display. Press **Set** to confirm.
- If the RDS signal is not received, the RDS icon will disappear after about 60 seconds and "SET FAIL" appears on the display. You should then set the time manually as instructed below.

Manual Setting (for countries without RDS broadcasting)

1. Press and hold **Set** for 3 seconds to enter the clock setting mode.
2. Press and hold << or >> to adjust the time. As the minutes pass 60 the hour will alter by 1 in either direction dependant on the button being pressed.

 
ALARM FUNCTION

Setting the Alarm

1. Press and hold **Set** for 3 seconds to enter the clock setting mode and press it again to enter the alarm setting mode.
 - The alarm timer and Zzz icons will then flash on the display.
2. Select AL1 / AL2 / Zzz by pressing << or >> repeatedly and press **Set** to confirm the desired selection.
3. Press repeatedly << or >> to adjust the alarm's time and press **Set** to confirm.
 - If the Zzz mode is selected, press **Set** to enter sound mode.
 - The sound or FM icons will then flash.
4. Press << or >> to select FM radio mode or natural sound mode and press **Set** to confirm.
 - When FM radio mode is selected, press repeatedly << or >> to search the desired station. If the RDS signal can be received, the RDS icon will be displayed and the clock will automatically be set to the right time.
 - When natural sound mode is selected, press repeatedly << or >> to select birds, frogs, river or wave sounds, then press **Set** to confirm the desired natural sound.
 - The volume icon will then flash.
5. Press << or >> on the left side repeatedly to adjust the alarm volume from 0 to 20 and press **Set** to confirm.
 - The light brightness icon will then flash.
6. Press << or >> on the right side repeatedly to adjust the light brightness and press **Set** to confirm and exit.

Setting the Alarm On / Off

Press **Alarm** repeatedly to select the desired alarm mode as below.

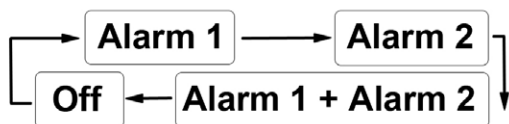

Snooze Function

When the alarm sounds, you can press Snooze on the top to temporarily deactivate the alarm, which will activate again after approximately 5 minutes. The ALARM icon will flash on the display when the snooze function is enabled.

To stop the alarm, press **Off**.

Other Features:

Sunrise Simulation

15 minutes before the set alarm time the light will gradually illuminate your room, simulating the sunrise, and allowing you to wake up in a natural and relaxed way.

- *The alarm icon will flash on the display.*

Quick Check

When the alarm is set, press **Snooze** to start the alarm test.

Nap Timer

1. Press **Zzz** and the Zzz icon will show on the display.
 2. Press **Zzz** repeatedly to select from 15, 30, 45, 60, 75 or 90 minutes.
 3. The unit will sound an alarm after the selected time has elapsed.
- *To change the alarm sound, follow the steps in 'Setting the Alarm' then repeat steps 1 to 3.*
4. To stop the alarm, press **Off**.

Lamp Lighting

1. Press **Light** to turn on the lamp.
2. To adjust the light brightness, press up or down on the right side repeatedly from 0 to 20.
3. Press **Light** again to turn off the lamp.

Display Dimmer

To adjust the display brightness to off, normal or bright setting, press **Dimmer** repeatedly until the desired brightness is reached.

Care and Maintenance

If the product becomes dusty wipe with a damp cloth. Do not use any wax, polish sprays, or abrasive cleaners.

CAUTION: Never allow water or other liquids to get inside the unit whilst cleaning.

Bulb Replacement

Unplug the unit from the mains socket and allow to cool for 15 minutes before replacing the bulb.

1. Press the release button on the rear of the lampshade and remove the lampshade gently.
2. Unscrew the E27 fitting bulb anti-clockwise.
3. Replace with a new bulb and screw it in clockwise.
4. Replace the lampshade and push down until a click is heard, securing the release button.

Only experienced adults should replace bulbs. If using a standard incandescent bulb, ensure that the wattage does not exceed 60 Watts. For dimmable CFL bulbs this is not a relevant requirement.

Warranty

Each unit is warranted to be free from defects in material and workmanship for two years from the date of purchase. This warranty does not include the bulbs as these are consumable units, although we offer an additional 90 day guarantee on all bulbs. In the event of a failure or warranty claim please contact your original retailer.

Disposal Instructions

Please follow the correct disposal procedure for your product and packaging materials.

This will help conserve natural resources and ensure that it is recycled in a manner that protects the environment.

You must dispose of this product and its packaging according to local laws and regulations. Because this product contains electronic components, the product and its accessories must be disposed of separately from household waste when the product reaches its end of life.

Contact your local authority to learn about disposal and recycling. The product should be taken to your local collection point for recycling. Some collection points accept products free of charge.

Specifications

Power: 230V AC 50 Hz
Radio FM: 87.5 -108 MHz
Input Power: 60W

